11. WIRING DIAGRAMS

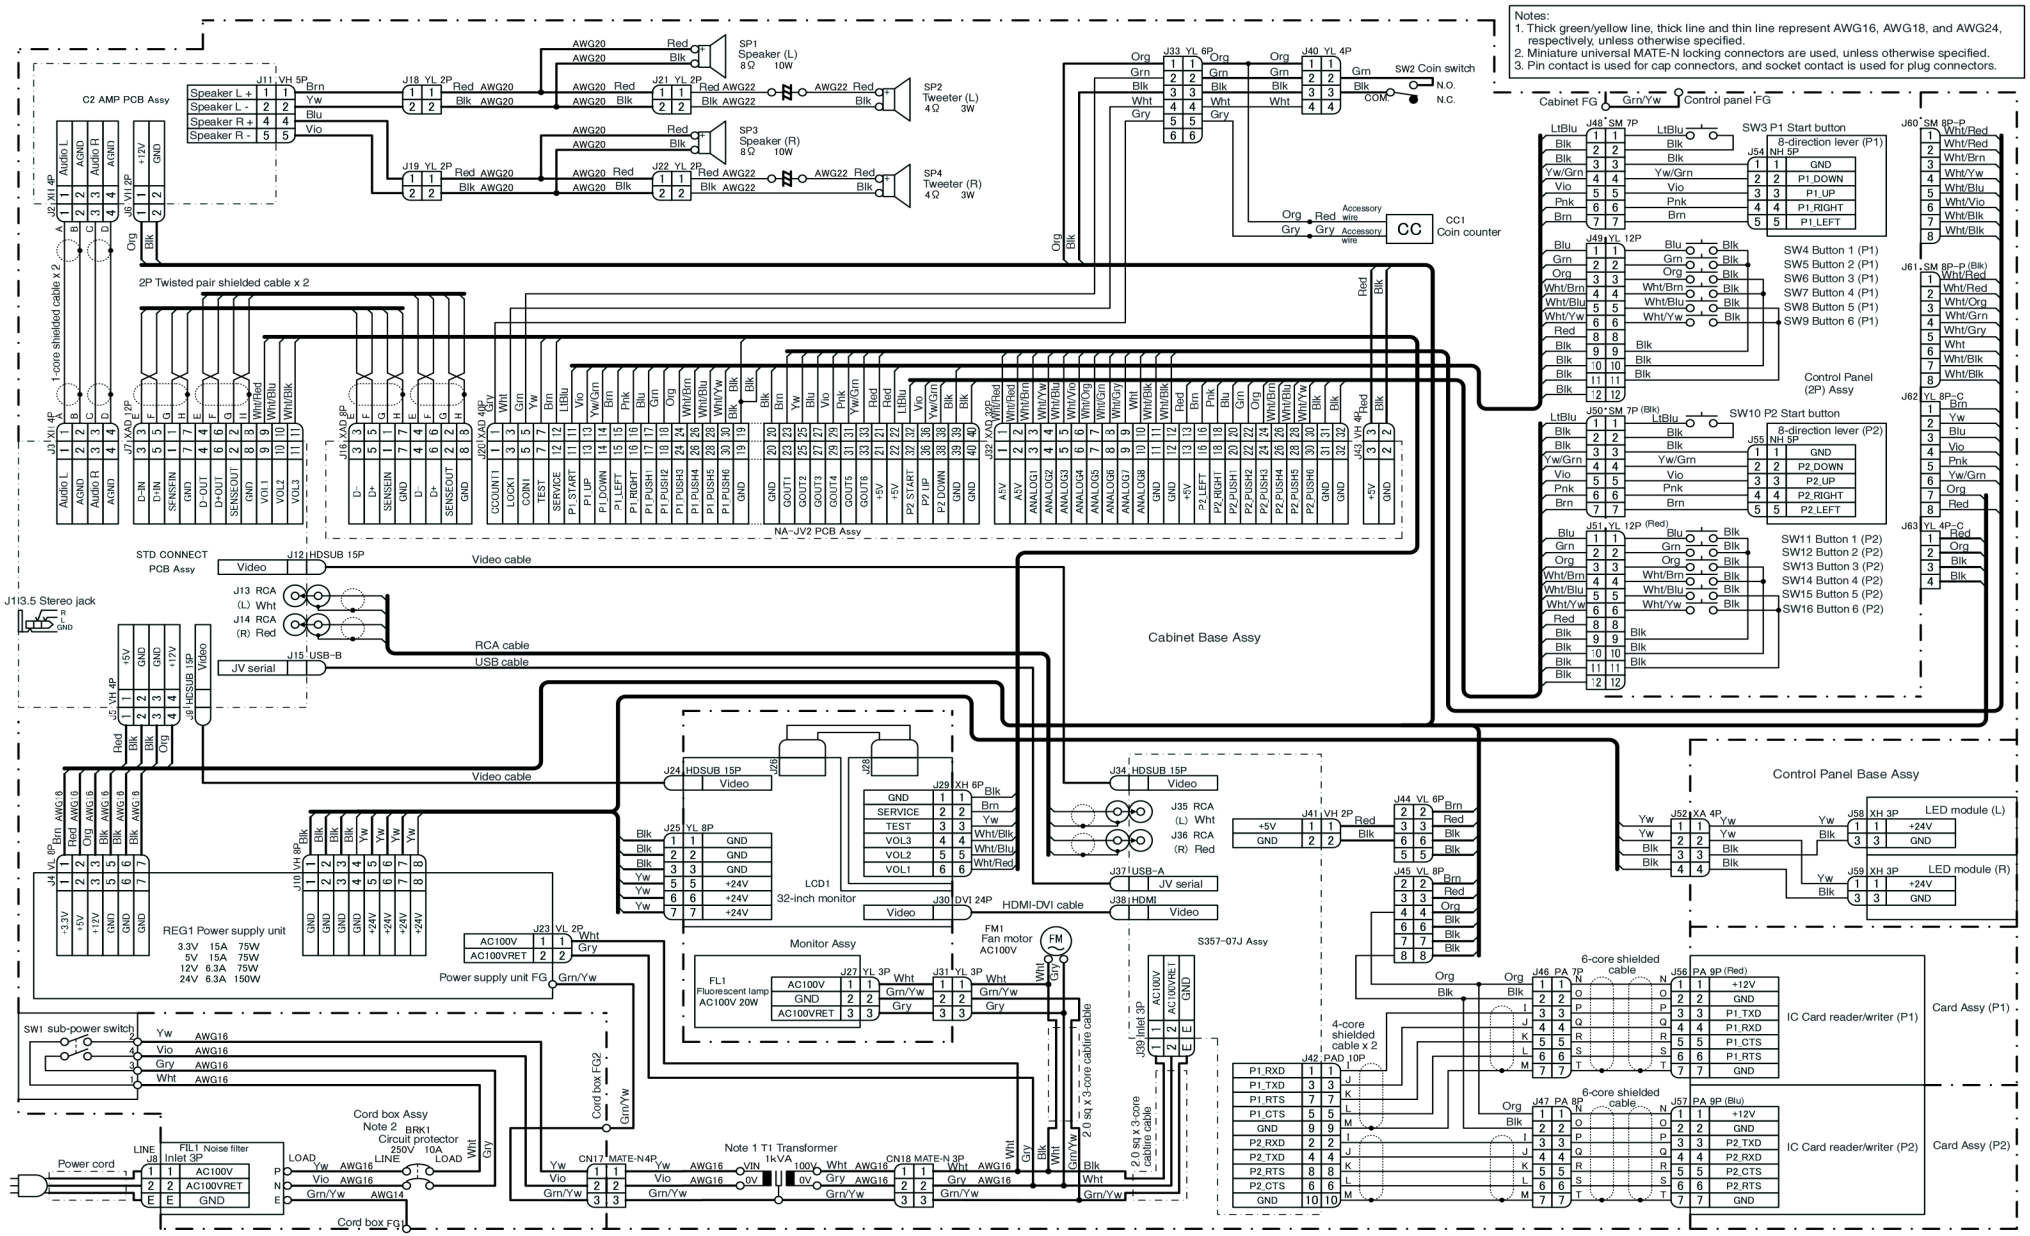

Note 1: Set the input voltage VIN to the local voltage.
Note 2: BRK1 to be used differs depending on the power supply voltage.